



928 Motorsports Supercharger Installation

Copyright 2008, 928 Motorsports, LLC All Rights Reserved

Installing 928 Motorsports Protection Plates




Get the car up a little bit where it is comfortable to get under the front end.

Remove the two bolts that go through the top of the factory tie-down bracket as shown. >>>>

You will need a 17mm wrench on either side of the bolts to break them free and remove them.

You can mount our protection plate on the inside or the outside of the factory tie-down bracket, but they will lay flat against the tie-down on only one side. Mount the protection plates to the side of the tie-down bracket where it can mount the flattest.

Install the new metric bolts provided through the Protection Plate, back thru the tie-down bracket as well, and the nut on the other side. Tighten.

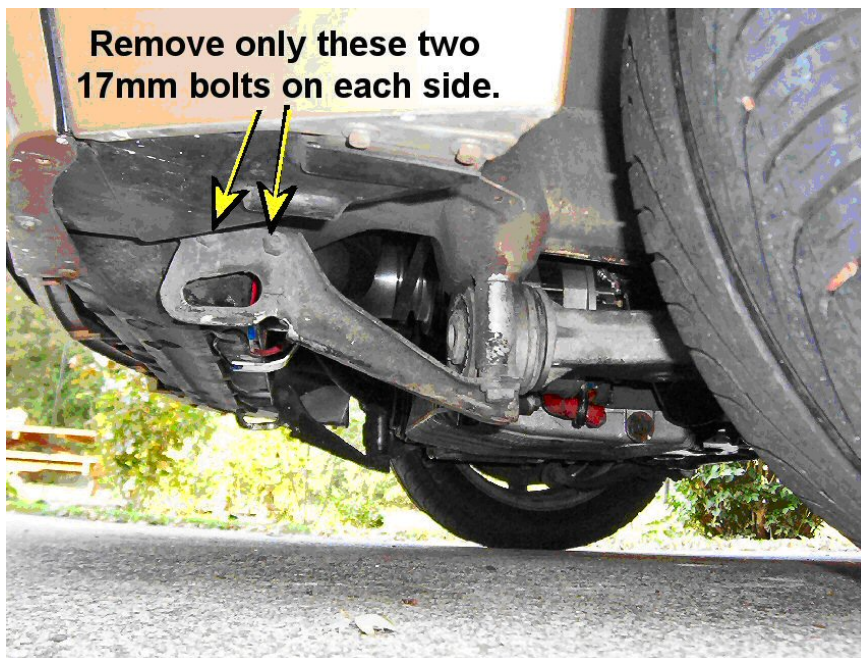

The Chin Spoiler Protection Plates are precision-drilled to line-up correctly with no adjustment necessary.



Typical 928 S-type install



Typical 928 S4/GT/GTS install

