




## How To Install Your Chin Spoiler Protection Plates

Get the car up a little bit where it is comfortable to get under the front end.

Remove the two bolts that go through the top of the stock protection plates as shown. You will need a 17mm wrench on either side of the bolts to break them free and remove them.

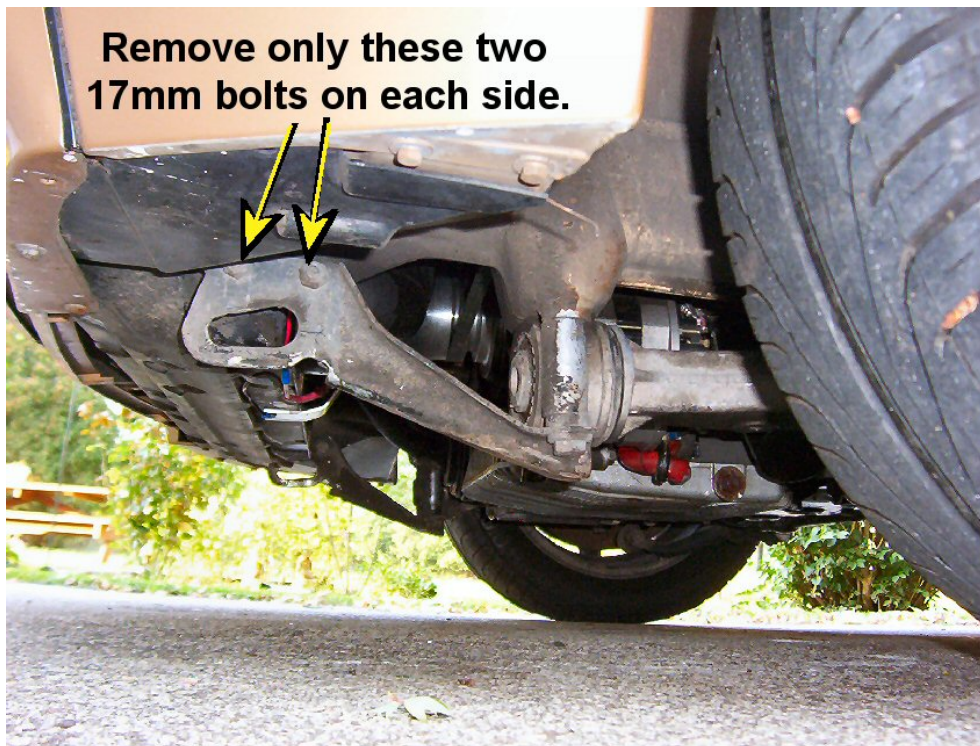

We will be replacing these bolts with the new ones from your kit, and re-using the nuts.

Install the new metric bolts provided through the Chin Spoiler Protection Plate, back thru the stock protection plate as well, and re-install the nut on the other side. Tighten. The Chin Spoiler Protection Plates are precision-drilled to line-up correctly with no adjustment necessary.

If you have questions or comments, we can be reached toll-free (in the US) at 877-FOR-928M, or 920-485-0488.

*Carl*

Carl Fausett, 928Motorsports, LLC

The Chin Spoiler Protection Plates are designed to fit on the inside of the factory protection plates, as shown.

**S-Type, from the center looking out.**



**S4/GT Type**

