



WWW.928MOTORSPORTS.COM

Installing a Short-Throw Shifter in a Porsche 928





www.928motorsports.com



5. Remove the retaining clips with a needle-nose pliers.



6. Pull the old shifter off the end of the shift rods, and out.



- nylon spacer
- 2 retaining clips
- 2 springs
- 4 nylon bushings

7. These are all the parts you should now have



These parts will not be going back in.



WWW.928MOTORSPORTS.COM

Installing a Short-Throw Shifter



8. Good time to test the front shift cup for excessive play. Grab the forward shift rod and...




9. Give it a good yank. It should ONLY ROTATE, but should not move for-and-aft.

If you discover play in that forward shift rod, call us for the right part to tighten that up!



10. Place the nylon bushings in the new short-shift lever.

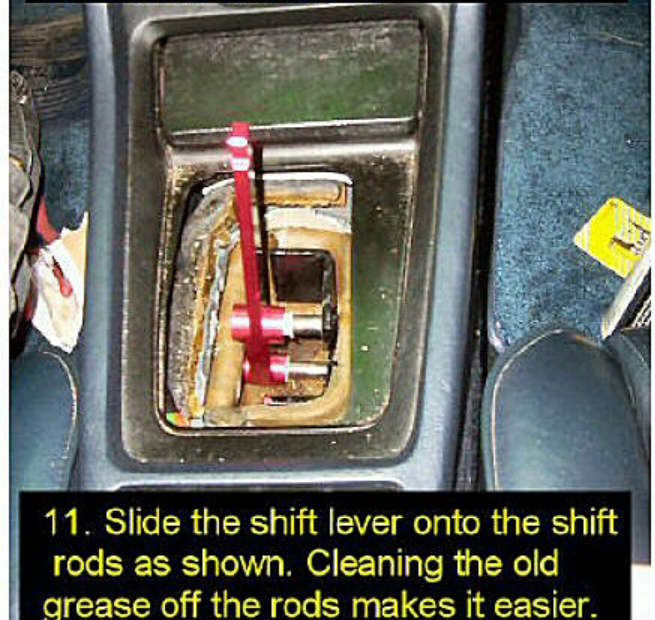


11. Slide the shift lever onto the shift rods as shown. Cleaning the old grease off the rods makes it easier.



WWW.928MOTORSPORTS.COM

Installing a Short-Throw Shifter

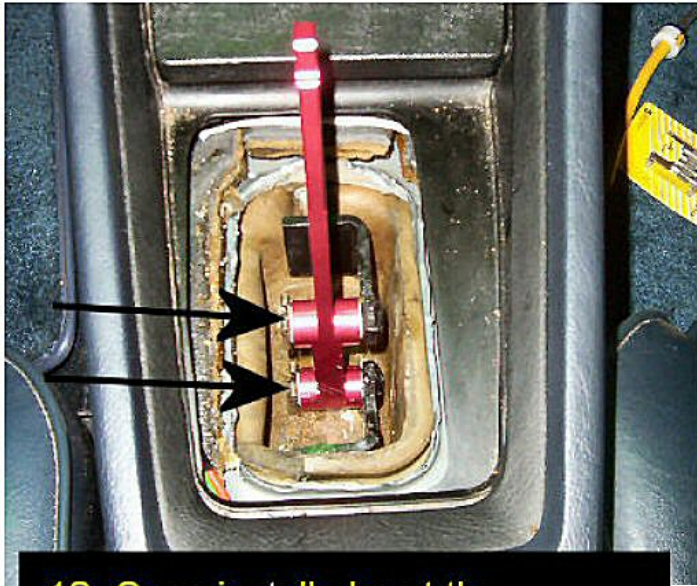

12. Once installed, put the retaining clips back on.



13. Slide the rubber boot onto the new shifter and tuck it in.



14. Then put your leather boot back on it and push it down into place. It may be very snug, push down hard!