




## 928 Motorsports Supercharger Installation

Copyright 2009, 928 Motorsports, LLC All Rights Reserved

### Install Air Flow Screen

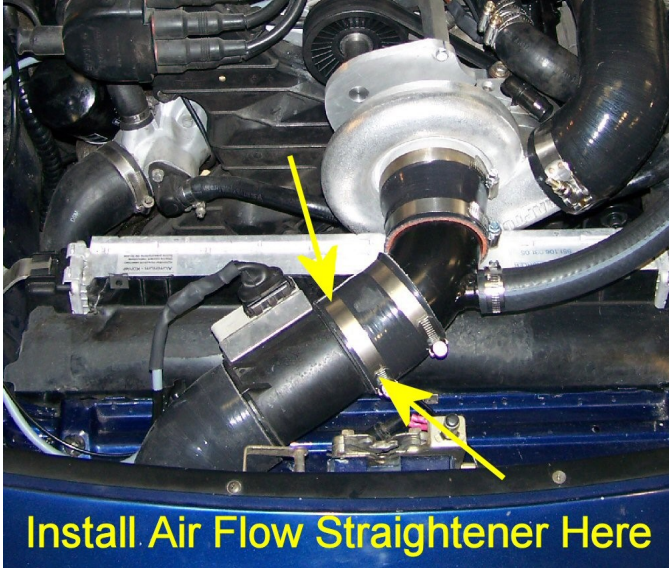

An air flow straightener screen has been provided in your kit.

This will prevent backwash from the supercharger at idle that can disrupt the MAF sensor readings at idle.

A car with a properly installed air flow straightener will idle better and smoother with no loss of mid-range or top-end power.

Install the air flow screen on the EXIT end of the MAF sensor, as shown. Simply place it over the screen that already exists at the end of the MAF and tie it down with the ties included.

You want to tie it down as a precaution to keep it from being sucked into the supercharger!

Trim the Air Flow Screen as needed with common scissors until it fits. Tie it down, and place the hose back on. Done.

